

VESTEL WHITE GOODS	VESTEL REFRIGERATOR	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

A- Changing The Door Swing Direction to Right Hand

1- Unscrew the two screws which are fixing the middle hinge. (FIG-1) Also remove the two big caps on the left side.

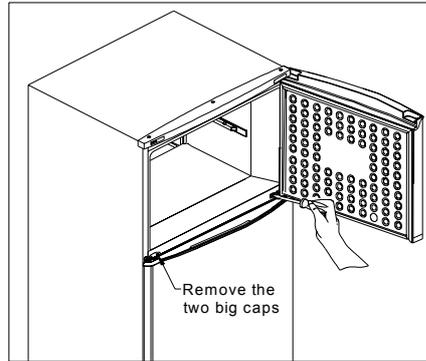


Figure - 1

2- Dismantle the refrigerator and freezer door from cabinet by pulling towards to you together with the middle hinge. (FIG-2)

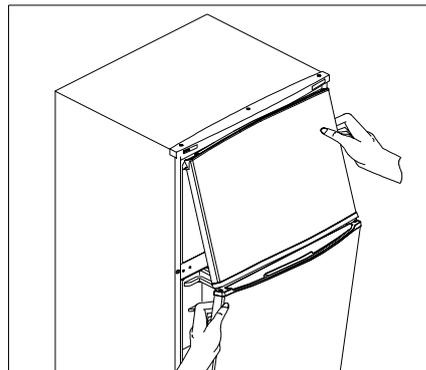


Figure - 2

3- Remove the kick plate by pulling forward. Unscrew the bottom hinge fixing screws and remove it. Unscrew the pin of the hinge from Hole 1, rotate the bottom hinge 90° and screw the pin to Hole 2. (See Detail A) Then screw the hinge to bottom left side of refrigerator. (FIG-3)

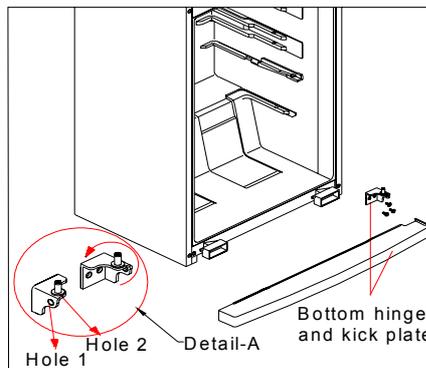


Figure - 3

VESTEL WHITE GOODS	VESTEL REFRIGERATOR	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

4.1 TOP HINGE REVERSING (FOR ALL DESIGN EXCEPT BONFANTI) :

Remove the head panel hinge covers and unscrew the two screws fixing the top hinge and remove it. Unscrew the pin of the top hinge. Turn the hinge by 180° then screw it to the left side hinge holes. Screw the pin of the top hinge. (FIG 4.1) Fix the hinge covers by replacing the right and left one. Insert the two big caps that are put in the user manuel bag to right side cap holes.

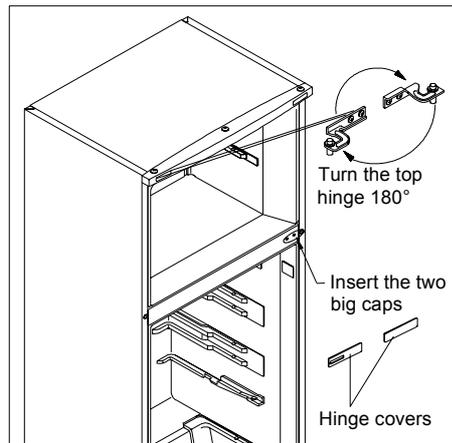


Figure - 4.1

4.2 TOP HINGE REVERSING (ONLY FOR BONFANTI DESIGN) :

Unscrew and remove the right top hinge pin (FIG-4.2/Detail-A) and screw on the left top hinge on the left side. (FIG-4.2/Detail-B) Insert the two big caps that are put in the user manuel bag to right side cap holes. (FIG-4.3)

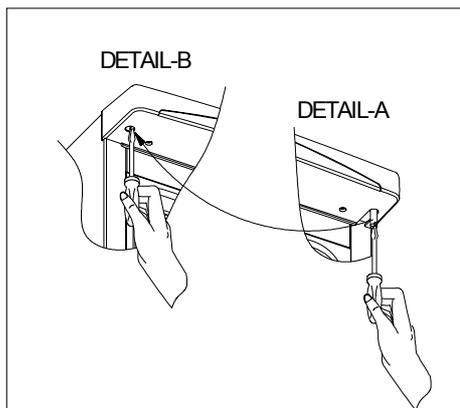


Figure - 4.2

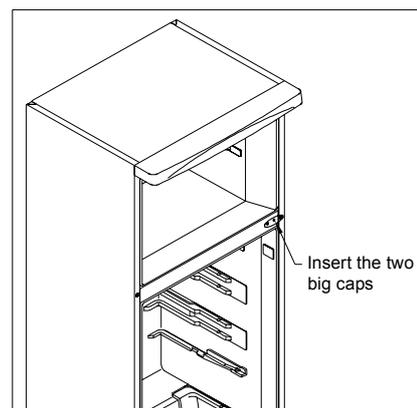


Figure - 4.3

VESTEL WHITE GOODS	VESTEL REFRIGERATOR	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

5- Replace the top bushing and top bushing cap. (FIG-5)

(You can use the bushing cap that is put in the user manual bag)

Remove the bottom bushing and bottom stopper and assemble it to the left side. (FIG-5)

5.1- Remove the door handle caps. Unscrew the screws that are fixing the door handle. Assemble door handle to the right side by doing the reverse operation.(FIG-5/Detail-A)
(Only for CLASSIC door design)

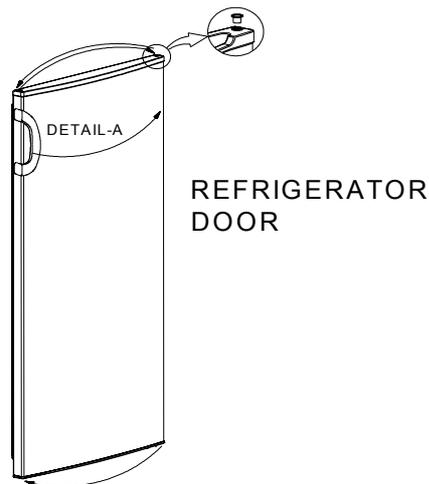


Figure - 5

6- Remove the top bushing and insert it into left hole. (FIG-6.1 and 6.2)

6.1- Remove the right door catcher and assemble the left door catcher (which is put in the user manual bag) to the left. (FIG-6.1)

(Only for BONFANTI, PININFARINA, VESTEL door design)

6.2- Remove the bottom bushing and insert it to the left hole. (FIG-6.2/Detail-A)

(Only for SLIMLINE and CLASSIC door design)

6.3- Remove the door handle caps. Unscrew the screws that are fixing the door handle. Assemble door handle to the right side by doing the reverse operation.(FIG-6.2/Detail-B)

(Only for CLASSIC door design)

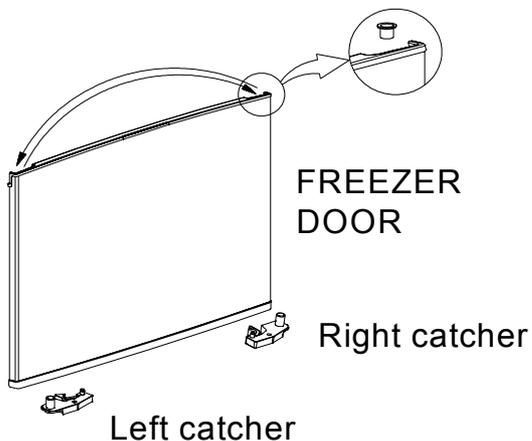


Figure - 6.1

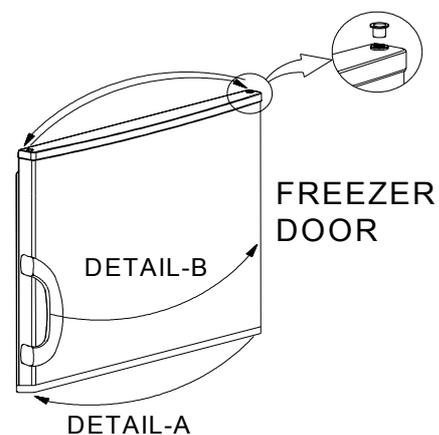


Figure - 6.2

VESTEL WHITE GOODS	VESTEL REFRIGERATOR	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

7- Turn the middle hinge 180°. Assemble the freezer door and refrigerator door together with middle hinge (Reverse operation of item 2) Fix the middle hinge by tightening the screws. Finally, by using a knife cut left side of the kick plate and assemble it. (FIG-7)

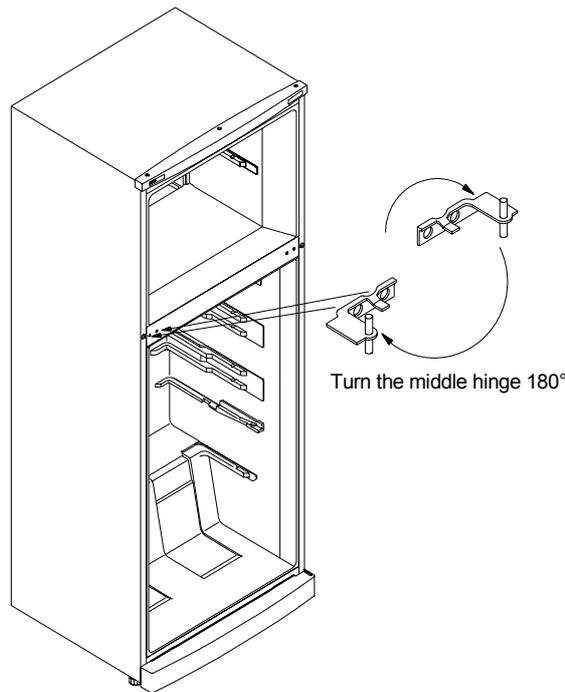


Figure - 7

B - Changing The Thermostat :


- 1) Remove the lamp cover and unscrew the fixing screw.
- 2) Remove the thermostat box by pulling it and disconnecting the cable terminals.
- 3) Remove the thermostat knob by pulling forward. Loosen the nut which is fixing the thermostat.
- 4) Pull out the thermostat bulb from the housing.
- 5) Replace the thermostat with the new one and assemble the thermostat box following the steps backwards.

C - Thermostat Knob

- ❖ This knob is used to control the temperature of the freezer and refrigerator parts automatically. It can be set to any value between “0” and “5” positions.
- ❖ “0” position indicates that the thermostat is “off”. The refrigerator is “off” on this setting.
- ❖ By turning the knob between “1” and “5”, you can increase or decrease the cooling degree.
- ❖ The refrigerator is designed to get optimum performance when the thermostat knob is set between position “2” to “4”.

VESTEL WHITE GOODS	VESTEL REFRIGERATOR	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

Super Switch (Used only for Tropical Class)

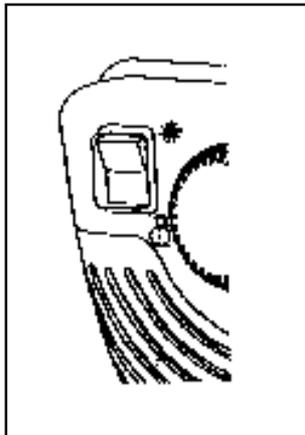

- ❖ Normally set this switch to ‘☀’ position. Except when the ambient temperature is low like in winter. (ie. below 18°C) or when the freezer temperature needs to be maintained lower. In that case, turn the switch to ‘☁’ position ON.
- ❖ To set super switch ON that is on the thermostat box, press the red switch down to ‘☁’ position. The red switch will lit.
- ❖ When the freezer compartment is cooled down to sufficient temperature, or the weather gets hot, turn the super switch off to save electrical consumption.